Field Engineer Handbook

Volume II

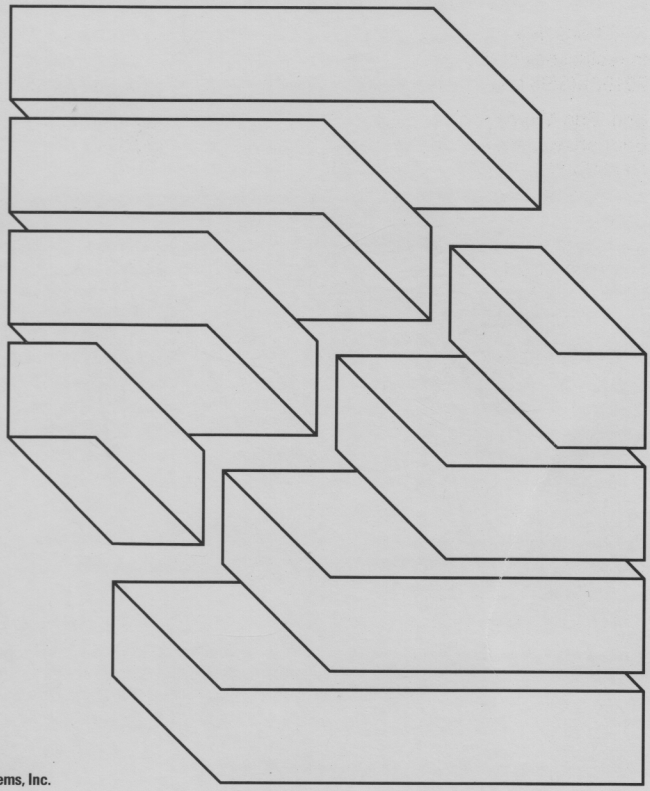

Part No: 800-4247-14
©1998 Sun Microsystems, Inc.

Written and published by Mike Persichetty and Gerri Roe

Copyright 1987 - 1998 by Sun Microsystems, Inc.
901 San Antonio Road, Palo Alto, California 94303-4900 U.S.A. All rights reserved.

This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Portions of this product may be derived from the UNIX® system, licensed from Novell, Inc., and the Berkeley 4.3 BSD system, licensed from the University of California. UNIX is a registered trademark in the United States and in other countries and is exclusively licensed by X/OpenCompany LTD. Third-party software, including font technology in this product, is protected by copyright and licensed from Sun's suppliers.

RESTRICTED RIGHTS : Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227 -14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95 and DFAR 227.7202-3(a).

Sun, Sun Microsystems, the Sun logo, Solaris, Open Boot, Ultra, Ultra Computing, Ultra Enterprise, Ultra Enterprise Cluster, UntraServer, UltraSPARC, JavaStation, Netra, MediaCenter, StorEdge, SunSwift, SunSwitch, SunFastEthernet, and Quad FastEthernet are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and in other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the United States and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc. All other product names mentioned herein are trademarks of their respective owners.

The OPEN LOOK® and Sun™ Graphical User Interfaces were developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

THIS PUBLICATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT.

THIS PUBLICATION COULD INCLUDE TECHNICAL INACCURACIES OR TYPOGRAPHICAL ERRORS. CHANGES ARE PERIODICALLY ADDED TO THE INFORMATION HEREIN: THESE CHANGES WILL BE INCORPORATED IN NEW EDITIONS OF THE PUBLICATION. SUN MICROSYSTEM, INC. MAY MAKE IMPROVEMENTS AND/OR CHANGES IN THE PRODUCT(S) AND/OR THE PROGRAM(S) DESCRIBED IN THIS PUBLICATION AT ANY TIME.

Printed in the USA

Preface

The *Field Engineer Handbook,* Volumes I and II, illustrates and describes Sun Workstations, Servers, and Options. The handbook is a reference manual for Sun service providers and customers.

This handbook complements other Sun technical publications and education courses. We assume that Sun service providers and customers who service and repair Sun products have access to these resources.

The FE Handbook is not an official configuration guide. Standard Configurations and Options supported by Sun Microsystems are documented in the End User Price List, Reseller Price List, Hardware Configuration Guides, Product Brochures, and Hardware Installation Manuals.

Send email to fehb-errata@persius.eng.sun.com to receive the errata for the *Field Engineer Handbook*.

Email your comments and suggestions to the authors at fehb@scarlett.eng.sun.com.

Handbook Organization

The Field Engineer Handbook is organized into two volumes.

Volume I includes the Configuration section.

- **Configurations** contains board and peripheral part numbers, option numbers, and illustrations; jumper and switch settings; video resolutions; memory module compatibility; and notes and references.

Volume II includes the following sections:

- **Parts Breakdown** contains workstation, server, and option illustrations; part number listings; and monitor specifications.

- **Troubleshooting** contains system LED error codes; SCSI connector pin assignments, SCSI sense keys and codes; tape drive manual ejection procedures; and communications device pin assignments.

- **Power** contains fuse and power cord charts; system wiring diagrams; and illustrations of power plugs, power supplies power sequencers, and power distribution units.

Revision History

DATE	DESCRIPTION		PART NUMBER
06/01/87	First Edition	1-Volume	800-1819-01
11/01/87	Second Edition	1-Volume	800-1819-01
04/01/88	Third Edition	1-Volume	800-4006-01
09/01/88	Fourth Edition	1-Volume	800-4006-02
05/01/89	Fifth Edition	2-Volume Set	851-1020-01
10//0189	Supplement	2-Volume Set	851-1020-02
05/01/90	Supplement	2-Volume Set	851-1020-03
12/01/90	Sixth Edition	2-Volume Set	851-1020-04
08/15/91	Seventh Edition	2-Volume Set	851-1020-05
02/15/92	Eighth Edition	2-Volume Set	851-1020-06
11/15/92	Ninth Edition	2-Volume Set	851-1020-07
05/28/93	Tenth Edition	2-Volume Set	851-1020-08
12/15/93	Eleventh Edition	2-Volume Set	851-1020-09
06/10/94	Twelfth Edition	2-Volume Set	851-1020-10
02/21/95	Thirteenth Edition	2-Volume Set	851-1020-11
02/23/96	Fourteenth Edition	2-Volume Set	851-1020-12
09/27/96	Fifteenth Edition	2-Volume Set	851-1020-13
04/16/97	Sixteenth Edition	2-Volume Set	851-1020-14
12/05/97	Seventeenth Edition	2-Volume Set	851-1020-15
06/17/98	Eighteenth Edition	2-Volume Set	851-1020-16
		Volume I	800-4006-16
		Volume II	800-4247-14

This page intentionally left blank.